



**R100**

### **⚠ Please note**

- ★ The adapter is only compatible for the official controllers, and do not support third-party authorized or non-authorized controllers.
- ★ Only PS4 version games can be supported on PS5.

## **Package contents**

R100 USB wireless adapter

Instruction manual

- ★ Devices with a free USB port

## **Supported Console / System**

Switch / PS5 / PS4 / Windows 10 PC


- ★ On the PS5 platform, only the PS4 version games are supported, and the PS5 version games are unsupported.
- ★ If used on the Switch Lite host, you need to purchase an OTG adapter to connect.

## **Supported Controller**

Xbox One X|S / Xbox Elite Series 2


Switch Pro / DualSense (PS5 Controller) / DualShock (PS4 Controller)

## **DEVIACE LAYOUT**

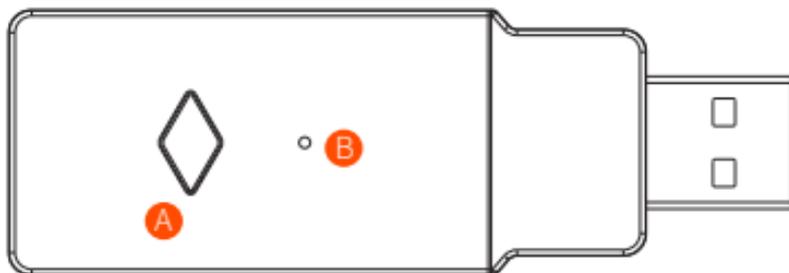

**A** PAIR Button

**B** Indicator

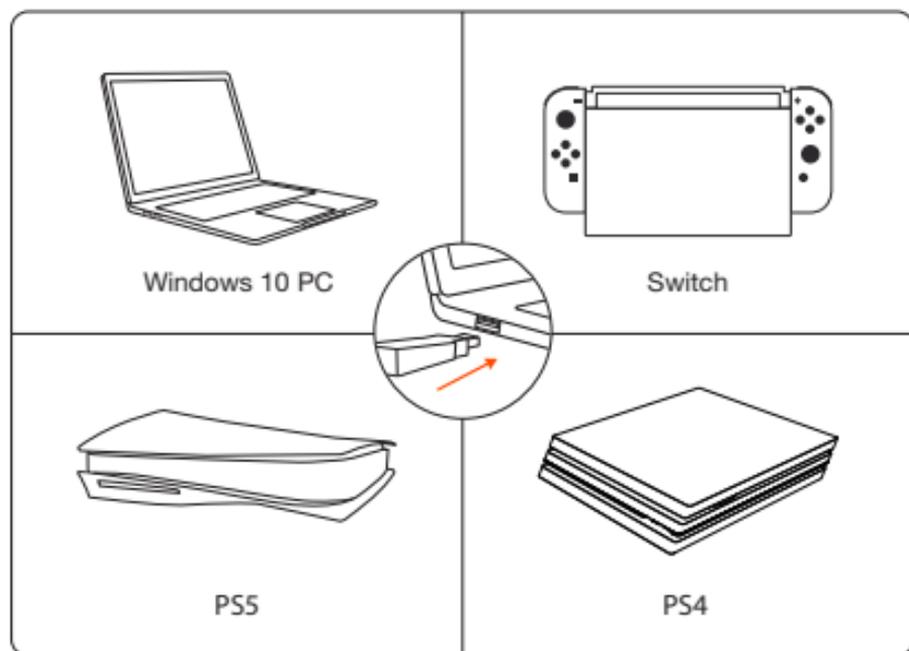

### R100 System Compatibility

Controller Platform	 DualSense	 DualShock	 Switch Pro	 Xbox one S&X	 Elite Series 2
PS5	Native support	✓	✓	✓	✓
PS4	✓	Native support	✓	✓	✓
Switch	✓	✓	Native support	✓	✓
Windows 10 PC	✓	✓	✓	✓	✓

## DualSense (PS5 controller)



## DualSense (PS5 controller)

- ★ When connecting to Switch, turn on "Settings> Controller and sensor> Wired communication of Pro controller".
  - a. Plug the R100 into the USB port of a compatible device, and when the R100 indicator flashes, it will enter the connection waiting state.
  - b. Press and hold the DualSense PS button for 10 seconds to turn it off.
  - c. First press and hold the SHARE button, and then press the PS button for 5 seconds, and when the DualSense indicator keeps flashing twice quickly, it adjusts to the connection waiting state.
  - d. When the R100 indicator and DualSense indicator are always on and you can control the compatible device normally, and the DualSense's light turns blue, the connection is successful.
- ★ If you have already connected, you only need to press the PS button for the next time connection.

Controllers and Sensors

TV Settings

System

Pro Controller Wired Communication

On

If this option is enabled, the Nintendo Switch Pro Controller will communicate with the console via wired communication when connected to it using the USB charging cable. The NFC touchpoint on the Pro Controller will be disabled while the controller is using wired communication.

## DualShock (PS4 controller)



## DualShock (PS4 controller)

- ★ When connecting to Switch, turn on Wired Communication in > Controller and Sensor > Pro Controller.
  - a. Plug the R100 into the USB port of a compatible device, and when the R100 indicator flashes, it will enter the connection waiting state.
  - b. Press and hold the PS button on the DualShock for 10 seconds to turn it off.
  - c. First press and hold the SHARE button, and then press the PS button for 5 seconds, and when the DualShock indicator keeps flashing twice quickly, it adjusts to the connection waiting state.
  - d. When the R100 indicator and DualShock indicator are always on and you can control the compatible device normally, and the DualShock's light turns purple, the connection is successful.
- ★ If you have already connected, you only need to press the PS button for the next time connection.

Controllers and Sensors

TV Settings


System

Pro Controller Wired Communication

On

If this option is enabled, the Nintendo Switch Pro Controller will communicate with the console via wired communication when connected to it using the USB charging cable. The NFC touchpoint on the Pro Controller will be disabled while the controller is using wired communication.

## Xbox One X • S / Elite2 controller

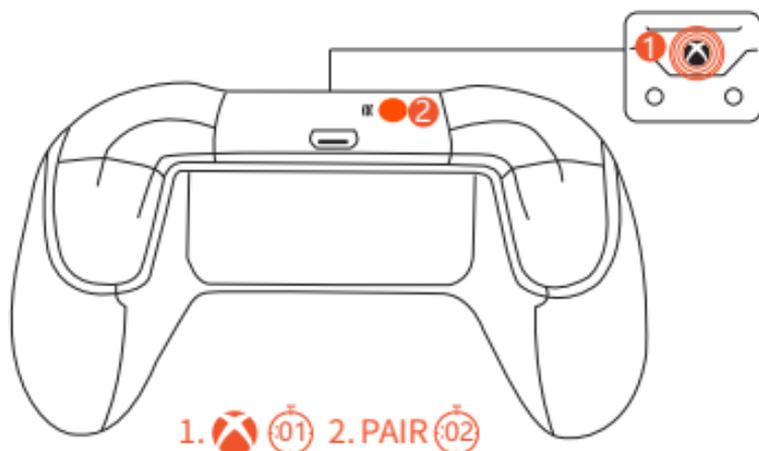

## Xbox One X • S / Elite2 controller

★ Turn on Wired Communication in Settings> Controllers and Sensors> Pro Controllers.

- Plug the R100 into the USB port of a compatible device, and when the R100 indicator flashes, it will enter the connection waiting state.
- Adjust the Xbox One X • S / Elite2 to wait for connection. (1) press the home button for 1 second and the indicator will blink. (2) press and hold the PAIR button for 2 seconds and the indicator will blink quickly.)
- When the R100 indicator and Xbox One X • S / Elite2 indicator I are always on, press the home button of the controller again, and you can operate normally, the connection is successful.

Controllers and Sensors

TV Settings

System

Pro Controller Wired Communication

On

If this option is enabled, the Nintendo Switch Pro Controller will communicate with the console via wired communication when connected to it using the USB charging cable. The NFC touchpoint on the Pro Controller will be disabled while the controller is using wired communication.

## Switch Pro



### Switch Pro

- ★ When connecting to Switch, turn on Wired Communication in > Controller and Sensor > Pro Controller.
  - a. Plug the R100 into the USB port of a compatible device, and when the R100 indicator flashes, it will enter the connection waiting state.
  - b. Press the PAIR button on the Switch Pro to turn it off.
  - c. Press and hold the PAIR button on the Switch Pro for 3 seconds, and when the Switch Pro indicator flashes rapidly, it adjusts to the connection waiting state.
  - d. When the R100 indicator and the Switch Pro indicator are always on, press the home button of the controller again, and you can operate normally, the connection is successful.



USE TUTORIAL

---



## GET HELP WITH BIGBIG WON SUPPORT

We are here to assist you with your BIGBIG WON devices. If you have any questions, please feel free to contact us:

BIGBIG WON Official Web: [www.bigbigwon.com](http://www.bigbigwon.com)  
Customer Service: [support@bigbigwon.com](mailto:support@bigbigwon.com)

## ▲ ご注意

- ・ 只今、対応デバイスの公式コントローラーのみに対応します。
- ・ PS5でPS4バージョンのゲームのみ対応できます。

## パッケージ内容

R100 USB ワイヤレスアダプター

取扱説明書

- ★ 空きのUSB端子を備えるデバイス

## 対応システム

Switch / PS5 / PS4 / Windows 10 PC


- ★ R100 Proは、PS5上で、サポートされるPS4ゲームで動作しますが、PS5ゲームでは動作しません。
- ★ Switch Liteと接続する場合は、USBアダプターを別途購入必要。

## 対応コントローラー


Xbox One X|S / Xbox Elite Series 2

Switch Pro / DualSense (PS5 コントローラー) / DualShock (PS4 コントローラー)

## 各部の説明

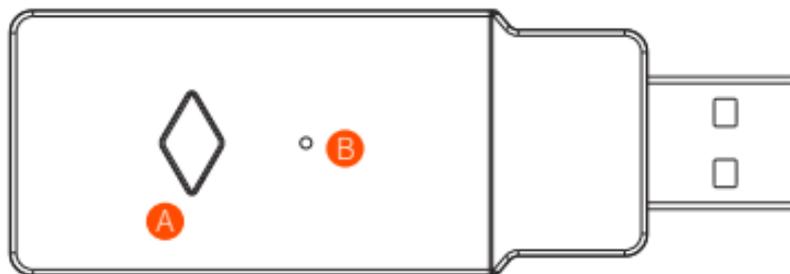

- Ⓐ ペ어링ボタン
- Ⓑ インジケーター

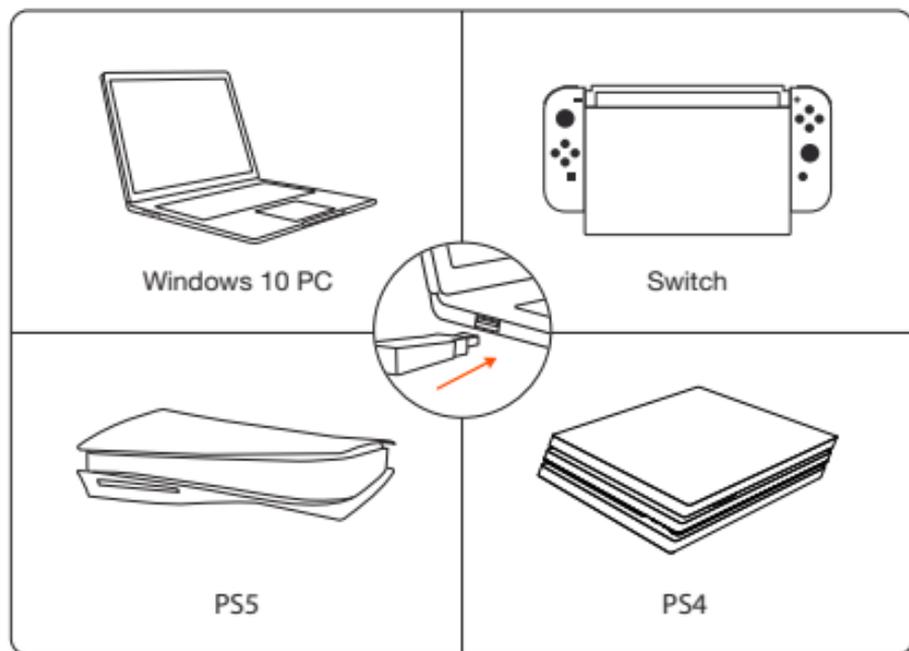

### R100 対応デバイス一覧表

コントローラ コンソール	 DualSense	 DualShock	 Switch Pro	 Xbox One X S	 Xbox Elite Series 2
PS5	ネイティブサポート	○	○	○	○
PS4	○	ネイティブサポート	○	○	○
Switch	○	○	ネイティブサポート	○	○
Windows 10 PC	○	○	○	○	○

## DualSense (PS5コントローラー)



## DualSense (PS5コントローラー)

- ★ Switchと接続する場合は、「設定>コントローラーとセンサー>Proコントローラーの有線通信」をオンにしてください。
- a. R100を対応デバイスのUSB端子に差し込んで、R100のインジケーターが点滅すると、接続待ち状態に入ります。
- b. DualSenseのPSボタンを10秒長押しして、オフしてください。
- c. CREATEボタンを押してから、PSボタンを同時に5秒長押しして、DualSenseのインジケーターが速く2回点滅すると、接続待ち状態に調整します。
- d. R100のインジケーターとDualSenseのインジケーターが点灯になり、対応デバイスを正常にコントロールできると、接続完了です。
- ★ 再度接続の場合は、ステップaを繰り返して、PSボタンを押すだけで接続できます。

### コントローラーとセンサー

テレビ出力

本体

Proコントローラーの有線通信

ON

Nintendo Switch ProコントローラーをUSB充電ケーブルでつないでいる間、有線で通信するようにします。有線での通信中はNFCが使えなくなります。

## DualShock (PS4コントローラー)



## DualShock (PS4コントローラー)

- ★ Switchと接続する場合は、>コントローラーとセンサー>Proコントローラーの有線通信をオンにしてください。
- a. R100を対応デバイスのUSB端子に差し込んで、R100のインジケータが点滅すると、接続待ち状態に入ります。
- b. DualShockのPSボタンを10秒長押しして、オフしてください。
- c. SHAREボタンを押してから、PSボタンを同時に5秒長押しして、DualShockのインジケータが速く2回点滅すると、接続待ち状態に調整します。
- d. R100のインジケータが点灯になり、DualShockのインジケータがパープル色に点灯になると、対応デバイスをコントロールできると、接続完了です。
- ★ 再度接続の場合は、ステップaを繰り返して、PSボタンを押すだけで接続できます。

### コントローラーとセンサー

テレビ出力


本体

Proコントローラーの有線通信

ON

Nintendo Switch ProコントローラーをUSB充電ケーブルでつないでいる間、有線で通信するようにします。有線での通信中はNFCが使えなくなります。

## Xbox One X・S / Elite2 コントローラー

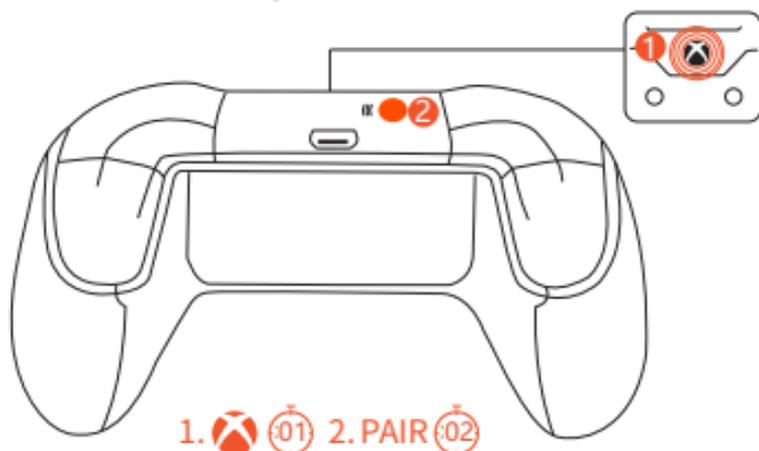

## Xbox One X・S / Elite2 コントローラー

★ Switchと接続する場合は、>コントローラーとセンサー>Proコントローラーの有線通信をオンにしてください。

- R100を対応デバイスのUSB端子に差し込んで、R100のインジケーターが点滅すると、接続待ち状態に入ります。
- Xbox One X・S / Elite2を接続待ち状態に調整します(① ホームボタンを1秒押し、インジケーターが点滅します② PAIRボタンを2秒長押し、インジケーターが速く点滅します)
- R100のインジケーターとXbox One X・S / Elite2のインジケーターが点灯になり、対応デバイスを正常にコントロールできると、接続完了です。

### コントローラーとセンサー

テレビ出力

本体

Proコントローラーの有線通信

ON

Nintendo Switch ProコントローラーをUSB充電ケーブルでつないでいる間、有線で通信できるようにします。有線での通信中はNFCが使えなくなります。

## Switch Pro



### Switch Pro

- R100を対応デバイスのUSB端子に差し込んで、R100のインジケーターが点滅すると、接続待ち状態に入ります。
- Switch ProのPAIRボタンを押して、オフしてください。
- Switch ProのPAIRボタンを3秒長押しして、Switch Proのインジケーターが速い循環点滅すると、接続待ち状態に調整します。
- R100のインジケーターとSwitch Proのインジケーターが点灯になり、対応デバイスを正常にコントロールできると、接続完了です。



ビデオチュートリアル

---



いつでも気楽に  
連絡してください

お買い上げの商品について、また何か不明な点などございましたら、お気軽にお問合せくださいませ。喜んで解決のお手伝いをさせていただきます。

公式サイト: [jp.bigbigwon.com](http://jp.bigbigwon.com)  
お客様サービスアドレス: [supportjp@bigbigwon.com](mailto:supportjp@bigbigwon.com)

## ⚠ 请注意

- 当前, 兼容设备仅支持官方手柄。
- PS5主机仅支持PS4版本的游戏。

## 包装内容

R100 USB无线转换器

说明书

- ★ 具有可用USB端口的设备

## 支持主机/系统

Switch / PS5 / PS4 / Windows 10 PC


- ★ PS5平台上, 仅支持游玩PS4版本游戏, 不支持PS5版本游戏。
- ★ 于Switch Lite主机上使用, 需另购OTG转换器连接。

## 支持手柄

Xbox One X|S / Xbox Elite Series 2


Switch Pro / DualSense (PS5 手柄) / DualShock (PS4 手柄)

## 按键布局

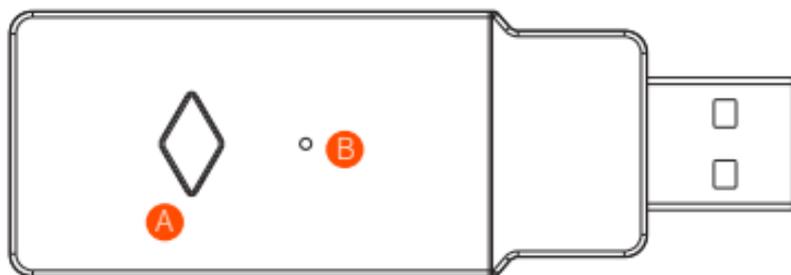

**A** 配对键

**B** 指示灯

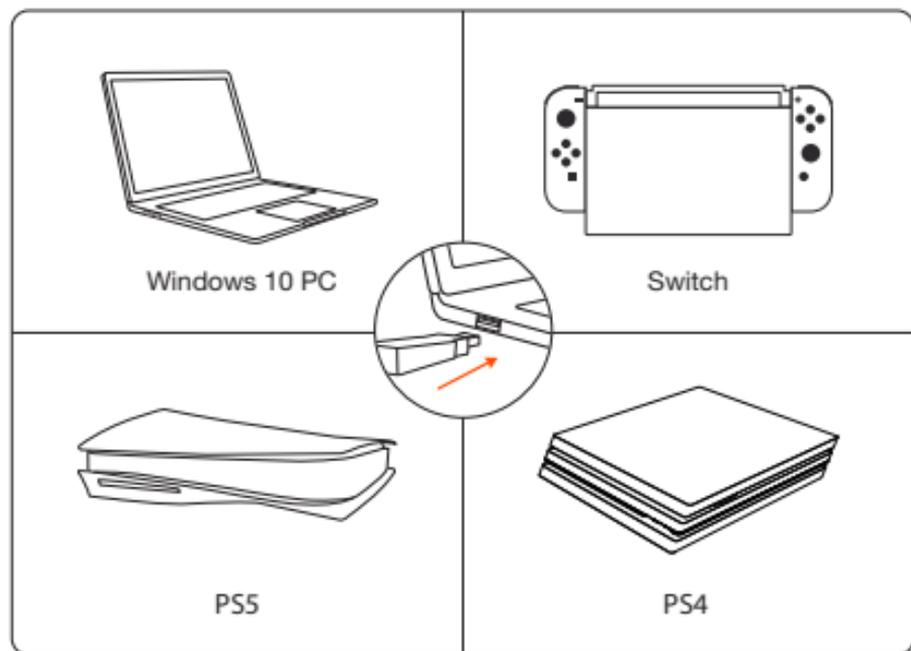

R100支持设备一览表

支持设备 支持平台	 DualSense	 DualShock	 Switch Pro	 Xbox one S&X	 Elite Series 2
PS5	原生支持	✓	✓	✓	✓
PS4	✓	原生支持	✓	✓	✓
Switch	✓	✓	原生支持	✓	✓
Windows 10 PC	✓	✓	✓	✓	✓

## DualSense (PS5手柄)



## DualSense (PS5手柄)

★ 连接Switch主机时，需要打开“设置>手柄和感应器> Pro手柄的有线连接”。

- 将R100插入主机的USB端口，当R100指示灯快速闪烁时，表明已进入等待连接状态。
  - 按住DualSense的PS键10秒钟将其关闭。
  - 先按住CREATE键不放，然后同时按住PS键5秒钟，当DualSense指示灯进入双闪模式时，表明已进入等待连接状态。
  - 当R100指示灯常亮，DualSense为蓝色常亮，并且您可以正常操控时，连接成功。
- ★ 若之前成功连接并未更换平台，再次连接将处于回连状态，只需按PS键，即可完成连接。

### 手柄与感应器

电视机输出

主机

### Pro手柄的有线连接

开启

使用USB充电线连接Nintendo Switch Pro手柄时，将通过有线进行连接。通过有线进行连接时，将无法使用NFC。

## DualShock (PS4手柄)



## DualShock (PS4手柄)

- ★ 连接Switch主机时，需要打开“设置>手柄和感应器> Pro手柄的有线连接”。
- a. 将R100插入主机的USB端口，当R100指示灯快速闪烁时，表明已进入等待连接状态。
- b. 按住DualShock上的PS键10秒钟将其关闭。
- c. 先按住SHARE键不放，然后同时按住PS键5秒钟，当DualShock指示灯进入白色双闪模式时，表明已进入等待连接状态。
- d. 当R100指示灯常亮，DualShock为紫色常亮，并且您可以正常操控时，连接成功。
- ★ 若之前成功连接并未更换平台，再次连接将处于回连状态，只需按PS键，即可完成连接。

### 手柄与感应器

电视机输出


主机

### Pro手柄的有线连接

关闭

使用USB充电线连接Nintendo Switch Pro手柄时，将通过有线进行连接。通过有线进行连接时，将无法使用NFC。

## Xbox One X · S / Elite2手柄

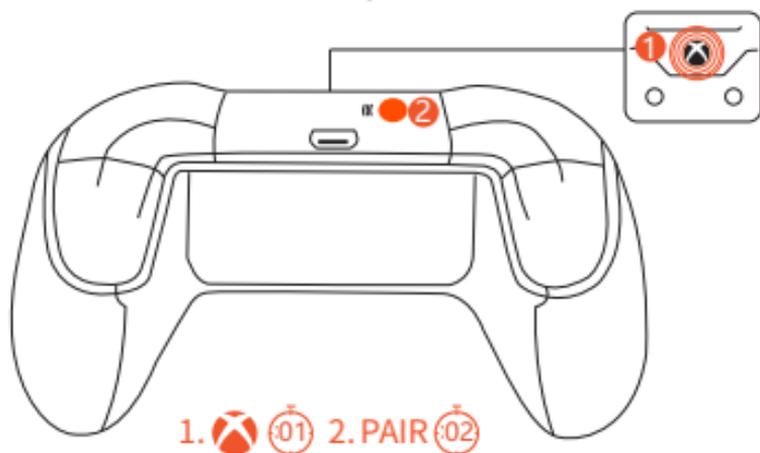

## Xbox One X · S / Elite2手柄

- ★ 连接Switch主机时，需要打开“设置>手柄和感应器> Pro手柄的有线连接”。
- b. 将R100插入主机的USB端口，当R100指示灯快速闪烁时，表明已进入等待连接状态。
- c. 按下HOME键开启Xbox One X · S / Elite2手柄，然后长按手柄的PAIR按钮2秒，指示灯进入快速闪烁状态，表明已进入等待连接状态。
- d. 当R100指示灯和Xbox One X · S / Elite2指示灯常亮后，再次按下手柄的HOME键，并且您可以正常操控时，连接成功。

手柄与感应器

电视机输出

主机

Pro手柄的有线连接

开/白

使用USB充电线连接Nintendo Switch Pro手柄时，将通过有线进行连接。通过有线进行连接时，将无法使用NFC。

## Switch Pro手柄



### Switch Pro手柄

- 将R100插入主机的USB端口，当R100指示灯快速闪烁时，表明已进入等待连接状态。
- 按下Switch Pro上的PAIR键将其关闭。
- 按住Switch Pro上的PAIR键3秒钟，当Switch Pro指示灯进入左右快速闪烁状态时，表明已进入等待连接状态。
- 当R100指示灯和Switch Pro指示灯常亮后再次按下手柄的HOME键，并且您可以正常操作时，连接成功。



使用教程

---



获得帮助  
技术支持

我们再这里帮助您使用BIGBIG WON设备, 如果您有任何问题,  
请随时联系我们

BIGBIG WON 官网: [www.bigbigwon.cn](http://www.bigbigwon.cn)

**⚠ NOTICE Please read this Precautions carefully.**

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
  - DO NOT use the product near fire.
  - DO NOT expose to direct sunlight or high temperatures.
  - DO NOT leave the product in a humid or dusty environment.
  - DO NOT impact the product or cause it to fall due to strong impact.
  - DO NOT touch USB port directly or it might cause malfunctions.
  - DO NOT strongly bend or pull cable parts.
  - Use a soft, dry cloth while cleaning.
  - DO NOT use chemicals such as gasoline or thinner.
  - DO NOT disassemble, repair or modify.
  - DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
  - DO NOT look directly at the optical light. It might damage your eyes.
  - If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor.
- ★ PS5, PS4, PS3, DualSense and DualShock are registered trademarks or trademarks of Sony Computer Entertainment Inc. Windows, Xbox One, Elite and Elite Series 2 are registered trademarks of Microsoft Inc. Switch and Switch Lite are registered trademarks of Nintendo Inc. All rights reserved. All other trademarks are the property of their respective owners. Photos and illustrations are not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under an approved official license and is not sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured by Sony Computer Entertainment Inc or Microsoft Inc or Nintendo Inc.

**▲ ご注意:保護者の方へ必ずお読みください。**

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
- 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
- 火気のある場所では絶対に使用しないでください。
- 長時間直射日光当てたり、高温となる場所に置かないでください。
- 本品を湿気やホコリの多いところに置かないでください。
- 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
- 故障の原因になりますので、USB端子を直接手で触らないでください。
- ケーブル部を強く曲げたり引っ張ったりしないでください。
- お手入れの際には、乾いた柔らかい布を使用してください。
- ベンジン、シンナーなどの薬品は使用しないでください。
- 分解や修理、改造は絶対にしないでください。
- 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。

★ PS5、PS4、PS3、DualSense および DualShock はSony Computer Entertainment Inc.の登録商標または商標です。Windows、Xbox One、Elite および Elite Series 2 はMicrosoft Inc.の登録商標です。Switch、Switch ProはNintendo Inc.の登録商標です。その他、記載されている会社名、製品名は、各社の登録商標または商標です。写真やイラストは拘束力がありません。内容、デザイン、仕様は予告なしに変更されることがあり、国によって異なる場合があります。\*この製品は、Sony Computer Entertainment Inc、Microsoft IncまたはNintendo Incによって製造されたものではありません。

## 保修卡

(售后政策:非人为损坏,三个月包换、一年保修)

用户姓名	
联系电话	
联系地址	
售后要求	<input type="checkbox"/> 退 <input type="checkbox"/> 换 <input type="checkbox"/> 保修
售后原因	
订单编号	

(注:非墨将官网途径购买的产品,售后问题请直接与购买商家联系。)



PLAY BIG. WON BIG

© 2021 BIGBIG WON Inc. All rights reserved.  
Product may vary slightly from pictures.